

## CARE AND MAINTENANCE

THIS PRODUCT IS DESIGNED FOR USE IN A CLASSROOM ENVIRONMENT.  
TO CARE FOR AND MAINTAIN YOUR PRODUCT:

THE FRAME AND TIMBER CAN BE CLEANED USING A DAMP CLOTH OR SPONGE USING WARM WATER AND MILD SOAP. ALWAYS WIPE DRY THE FRAME IMMEDIATELY AFTER CLEANING.

INSPECT THE FRAME FOR ANY SIGNS OF BREAKAGE OR DETERIORATION OF FRAME OR PARTS.

DO NOT USE THE PRODUCT IF EXCESSIVE WEAR AND TEAR IS EVIDENT.

THIS PRODUCT IS DESIGNED FOR USE IN A DRY INDOOR ENVIRONMENT.  
DO NOT LEAVE THE PRODUCT OUTSIDE.

DO NOT ALLOW CHILDREN TO CLIMB ON THE PRODUCT.

## WARRANTY

AGAINST DEFECTS AND WORKMANSHIP FOR BOTH THE FRAME AND ANY ASSOCIATED PARTS. WITHIN THE WARRANTY PERIOD, THE MANUFACTURER WILL REPLACE OR REPAIR ANY DEFECTIVE PARTS FREE OF CHARGE.

THIS WARRANTY PERIOD COMMENCES AT THE DATE OF PURCHASE OF THE PRODUCT BY THE ORIGINAL PURCHASER AND EXTENDS ONLY TO THE ORIGINAL PURCHASER.

SHOULD THE ENTIRE PRODUCT OR ANY PARTS OF THE PRODUCT REQUIRE REPLACEMENT, WARRANTY ON THE REPLACEMENT PRODUCT OR PARTS ARE COVERED FOR A PERIOD OF 12 MONTHS FROM THE PURCHASE DATE OF THE ORIGINAL PRODUCT, NOT FROM THE DISPATCH DATE OF THE REPLACEMENT OF PRODUCT OR PARTS.



THIS WARRANTY DOES NOT COVER DAMAGE CAUSED BY ABUSE, ABNORMAL OR IMPROPER USE. THIS WARRANTY DOES NOT COVER GENERAL WEAR, TEAR AND PRODUCT AGING, MISUSE OF THE PRODUCT, INCORRECT ASSEMBLY, IMPROPER MAINTENANCE OR ACTS OF GOD (SUCH AS DAMAGE CAUSED BY FLOODING).

THIS PRODUCT COMES WITH GUARANTEES THAT CANNOT BE EXCLUDED UNDER CONSUMER LAW. YOU ARE ENTITLED TO A REPLACEMENT OR REFUND FOR A MAJOR FAILURE AND FOR COMPENSATION FOR ANY OTHER REASONABLY FORESEEABLE LOSS OR DAMAGE. YOU ARE ALSO ENTITLED TO HAVE THE GOODS REPAIRED OR REPLACED IF THE GOODS FAIL TO BE OF ACCEPTABLE QUALITY AND THE FAILURE DOES NOT AMOUNT TO A MAJOR FAILURE.

MTKU01

# Kids <sup>BY</sup> Design
  
## Kitchen & Laundry Play BLACK MODEL NUMBER: MTKU01

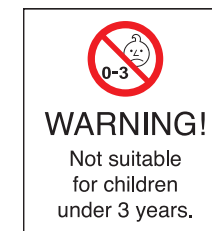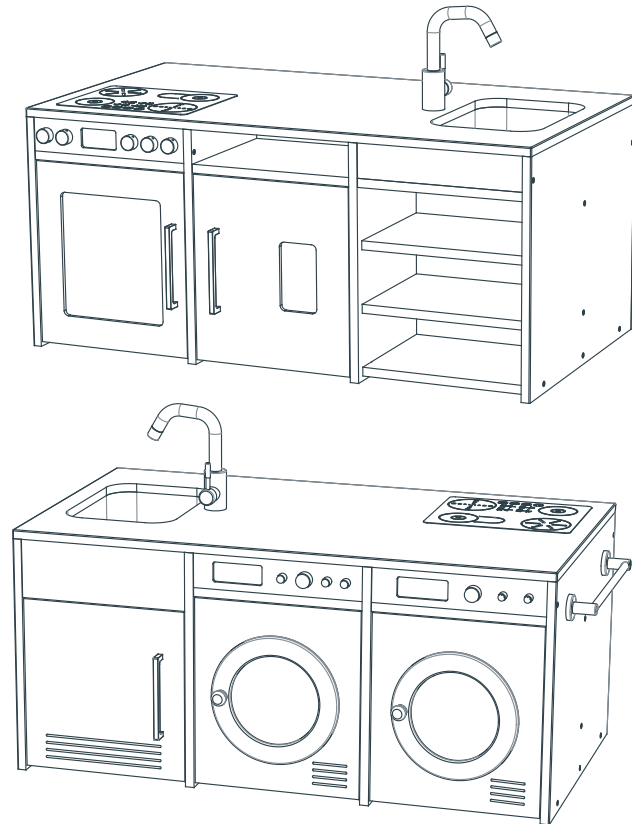


32

MTKU01

1

 
When unassembled, this package contains small parts, sharp points and edges. Adult assembly is required, and two adults are recommended. Do not stand, sit, kneel, climb on, or pull on the unit for support. Never leave children unattended with unit. Do not place unit near high heat or moisture. This product is intended for indoor use. Do not fully tighten screws until all screws have been loosely positioned. Before assembly check there are no missing parts. Electric drills may be used for assembly. Ensure the appropriate size drill bit is used and drill is on a slow and low torque setting.

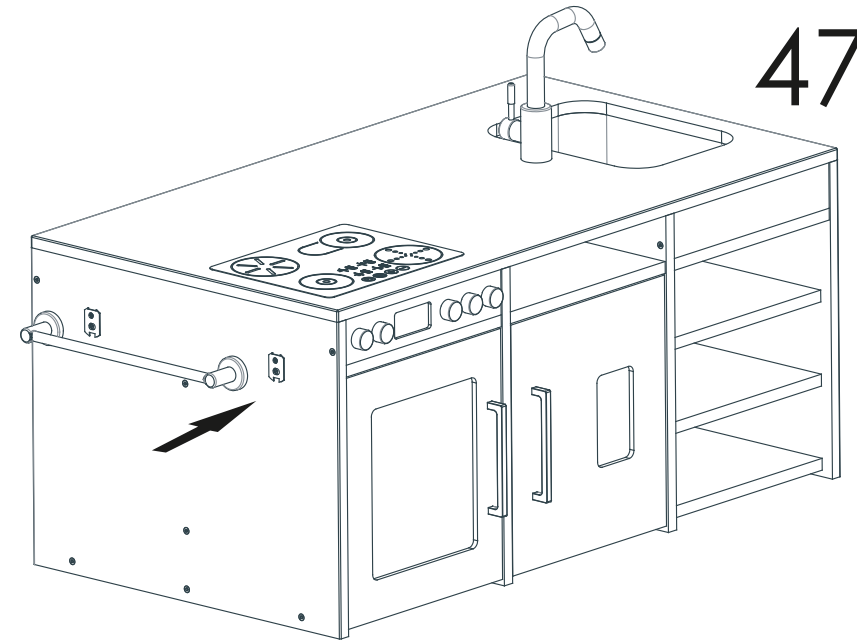

47.





<b>WARNING</b>	
	<p>This product is suitable for kindergarten and is only for indoor use.          This is not a safety device  <b>DO NOT LEAVE CHILDREN UNATTENDED.</b></p>

<b>PRODUCT NOTICE</b>	
	<p>This furniture is made of varnished wood, such as, liquids including water, oil, wet food &amp; drinks will damage the surface.          Regularly check and wipe only with a dry or slightly damp cloth</p>





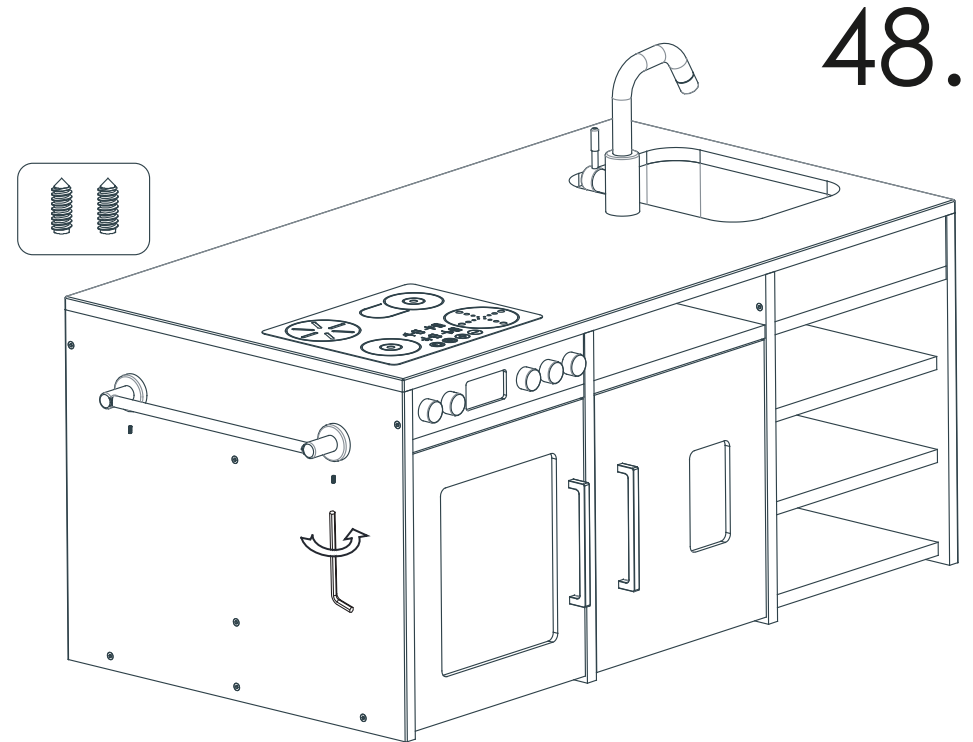 






48.

    45.

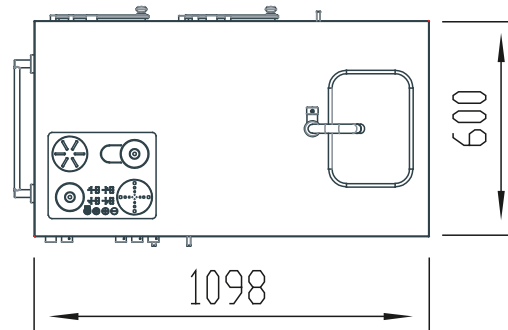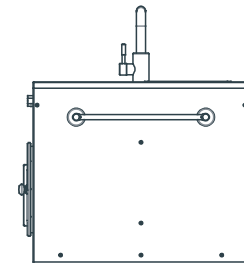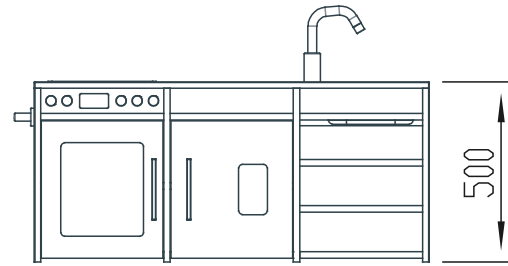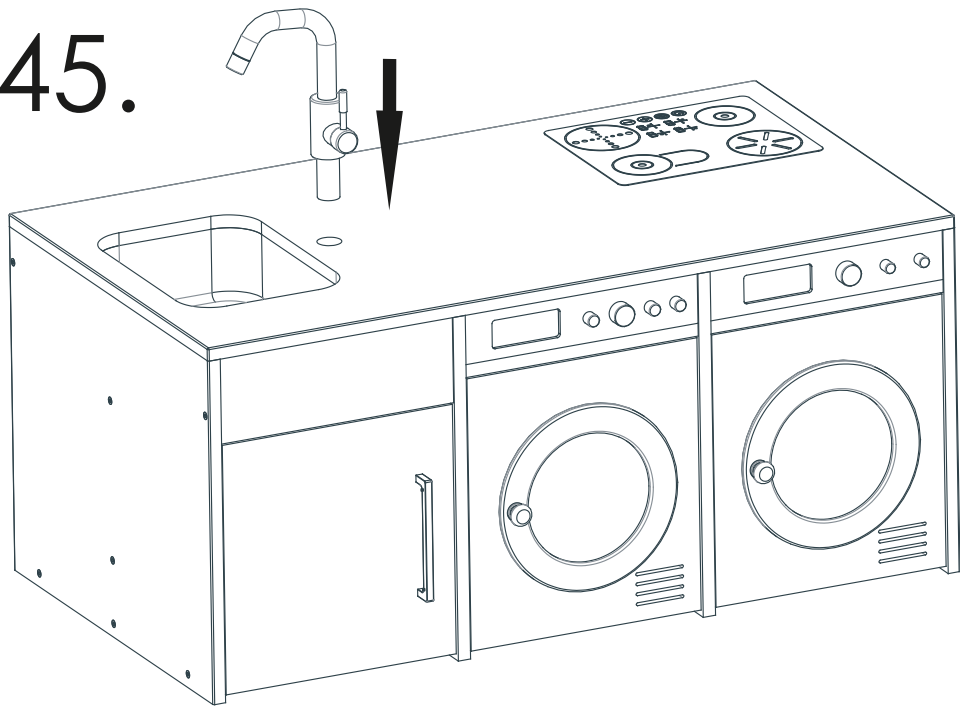


         46.

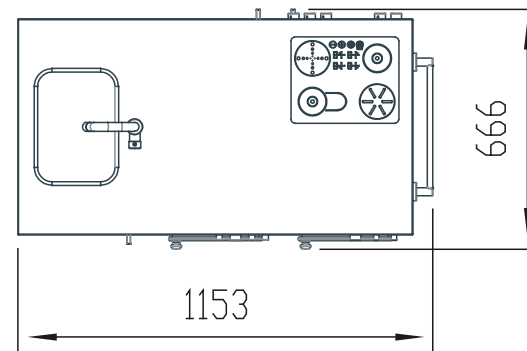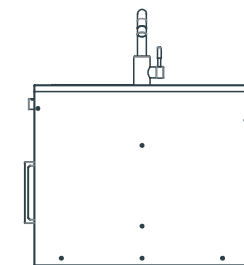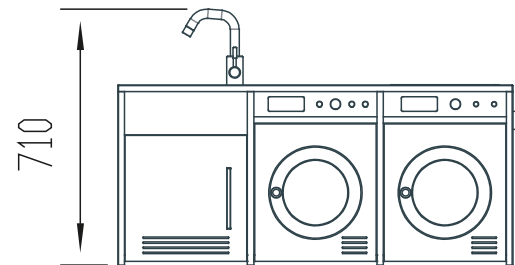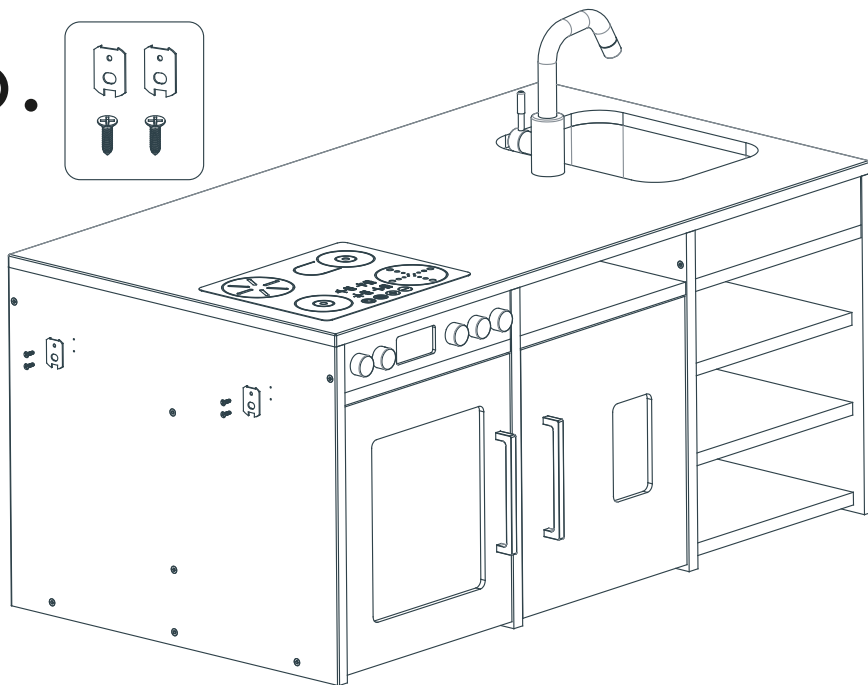
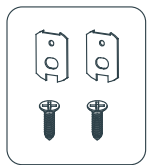


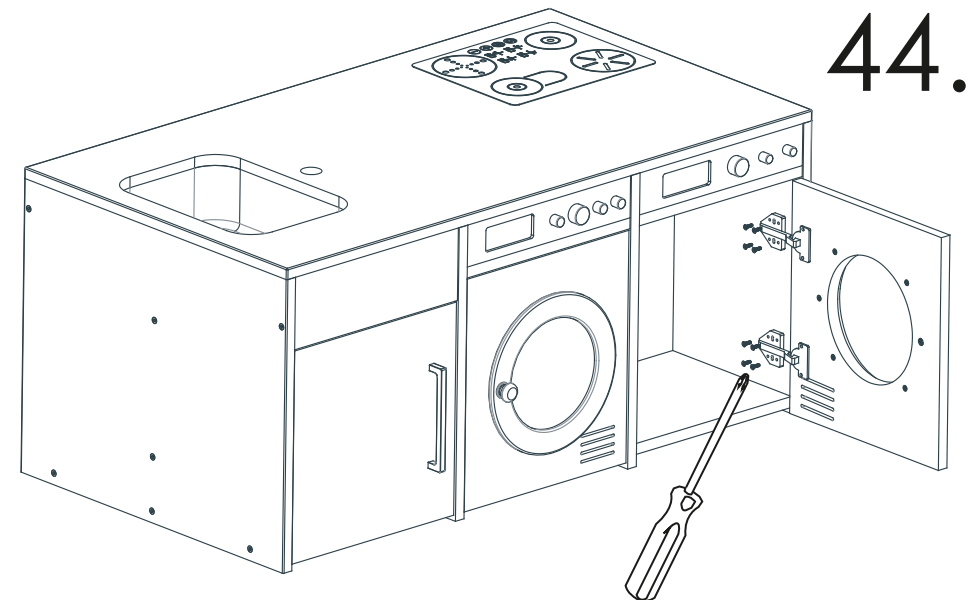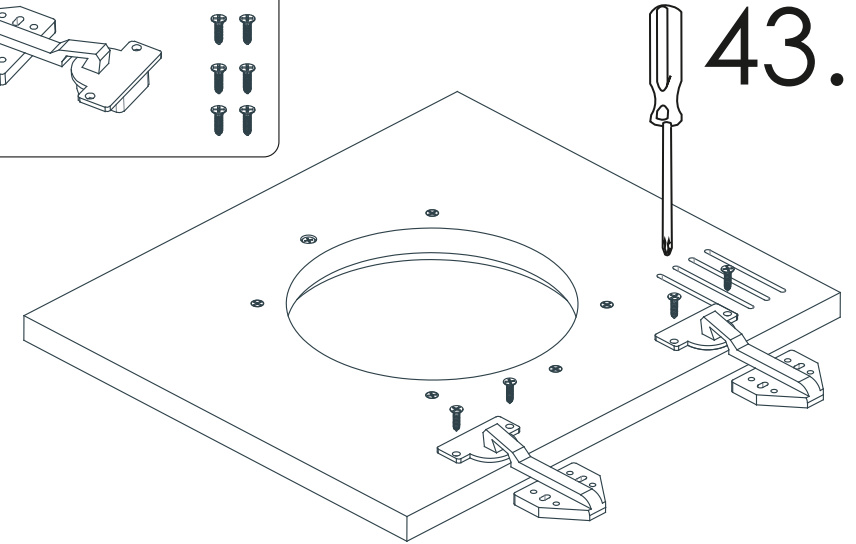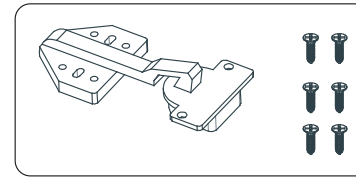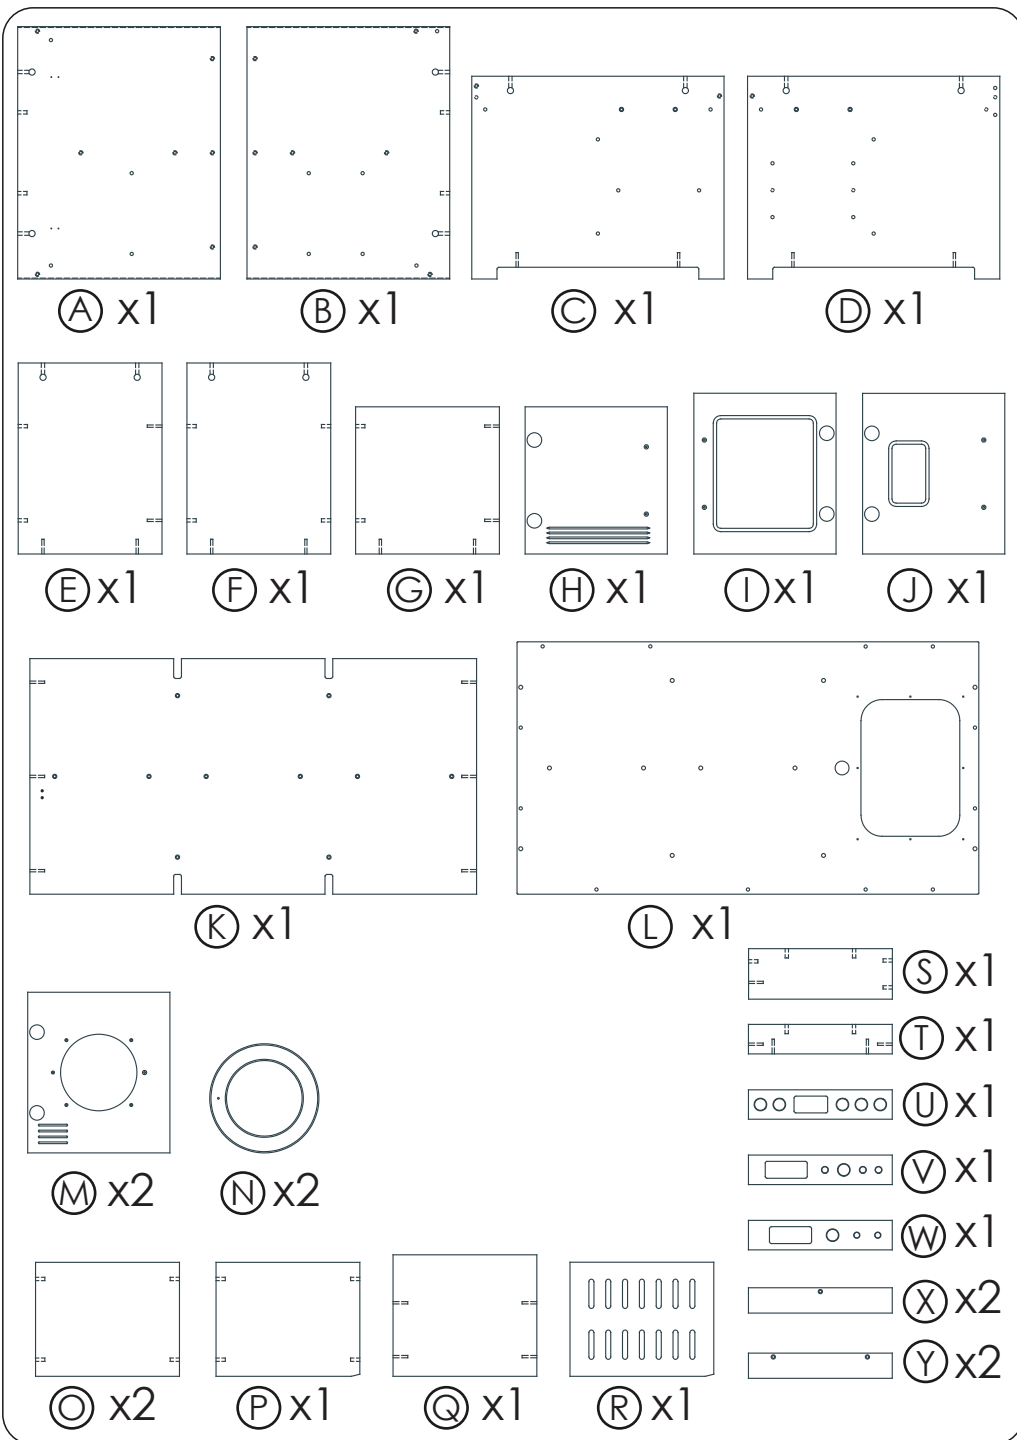



 
41.

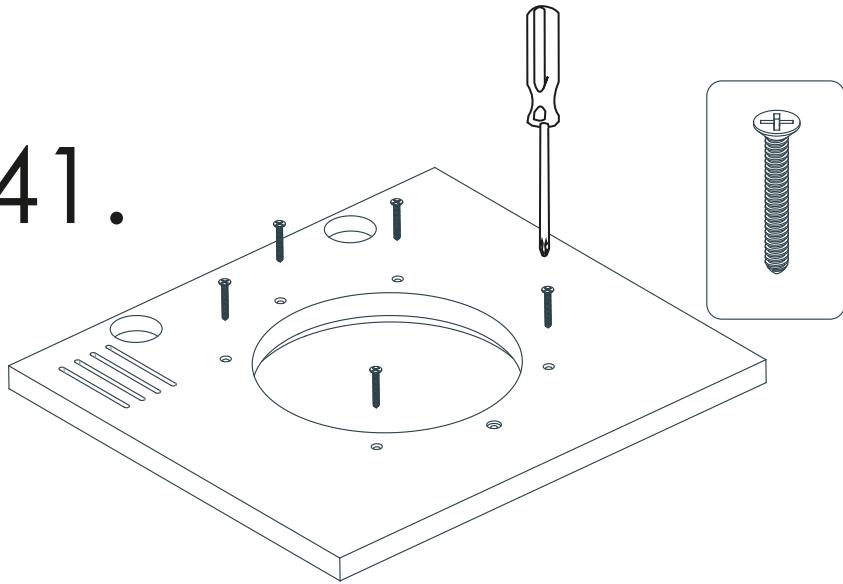

  
42.

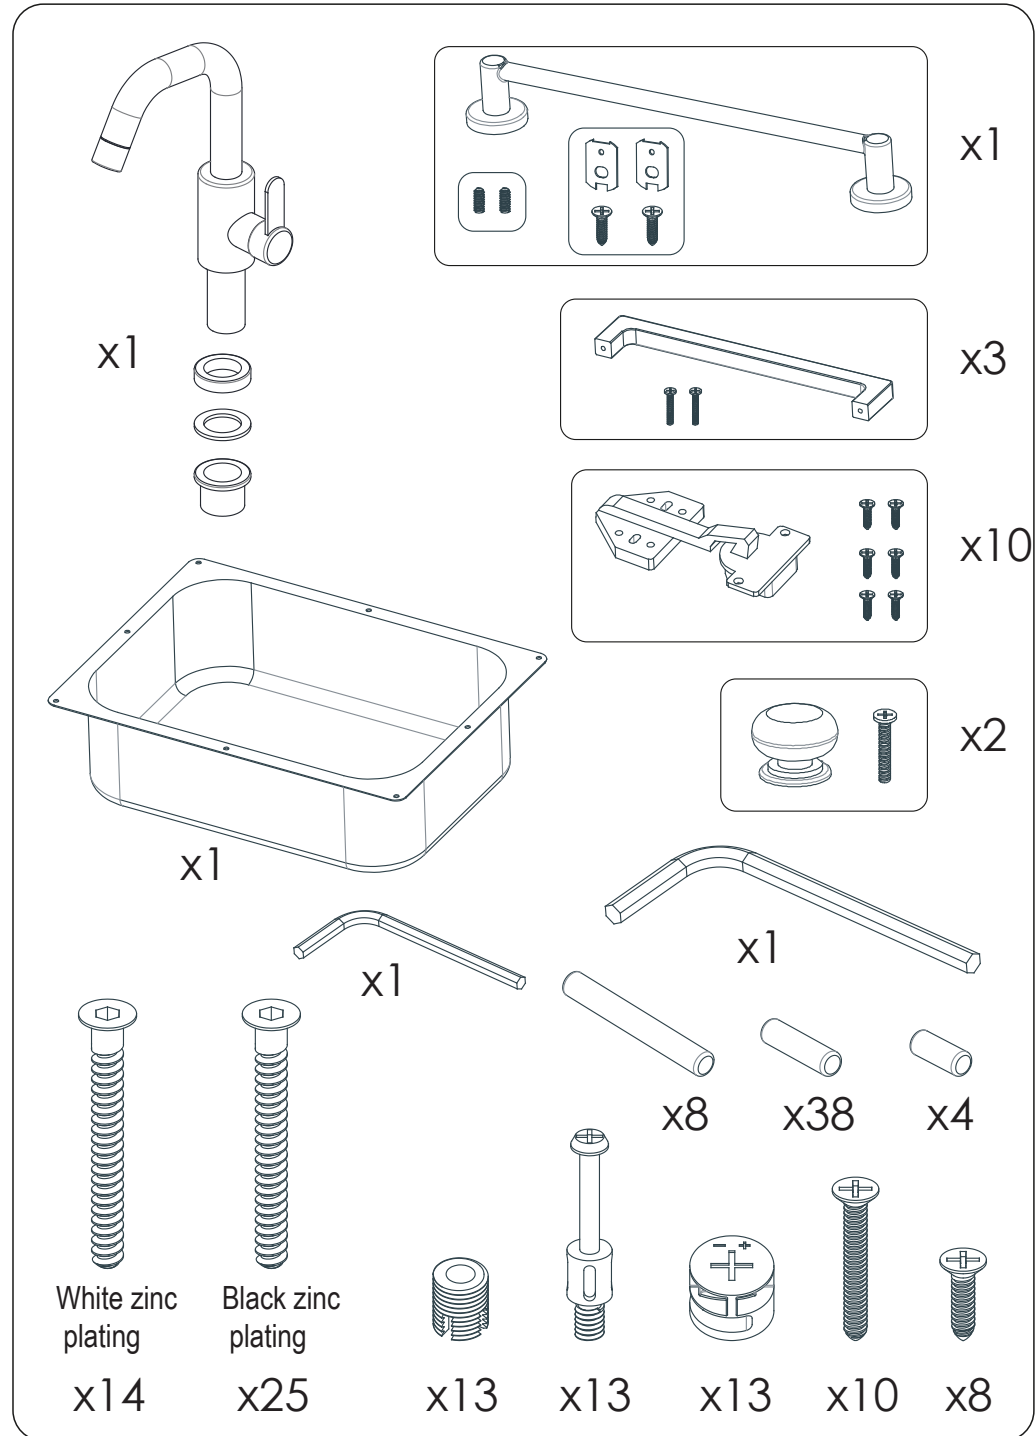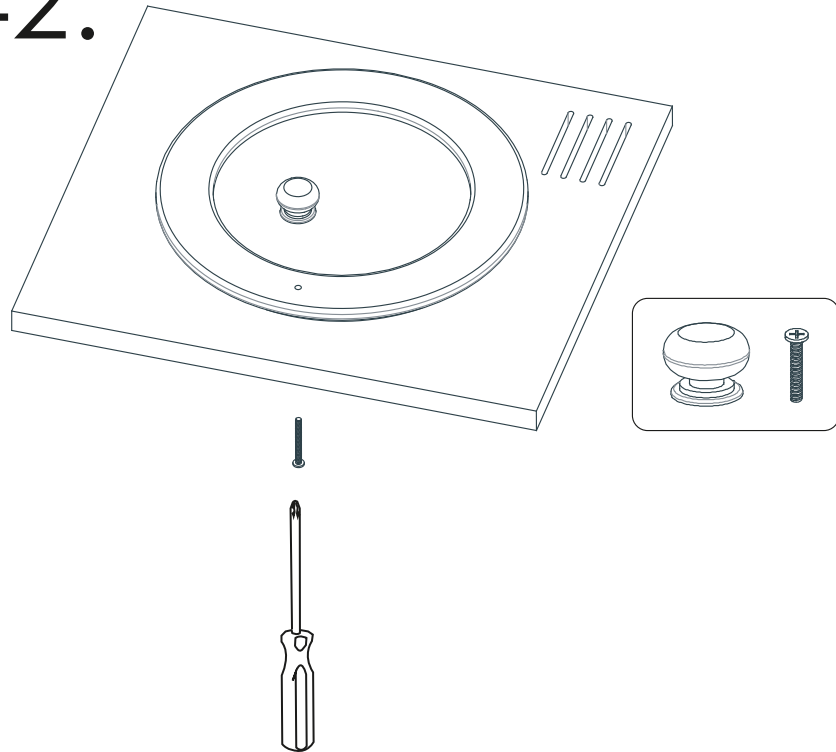

   
39.

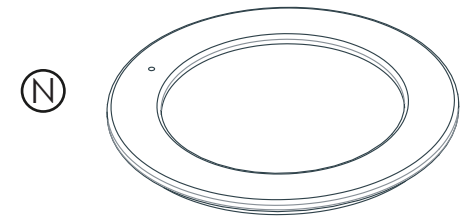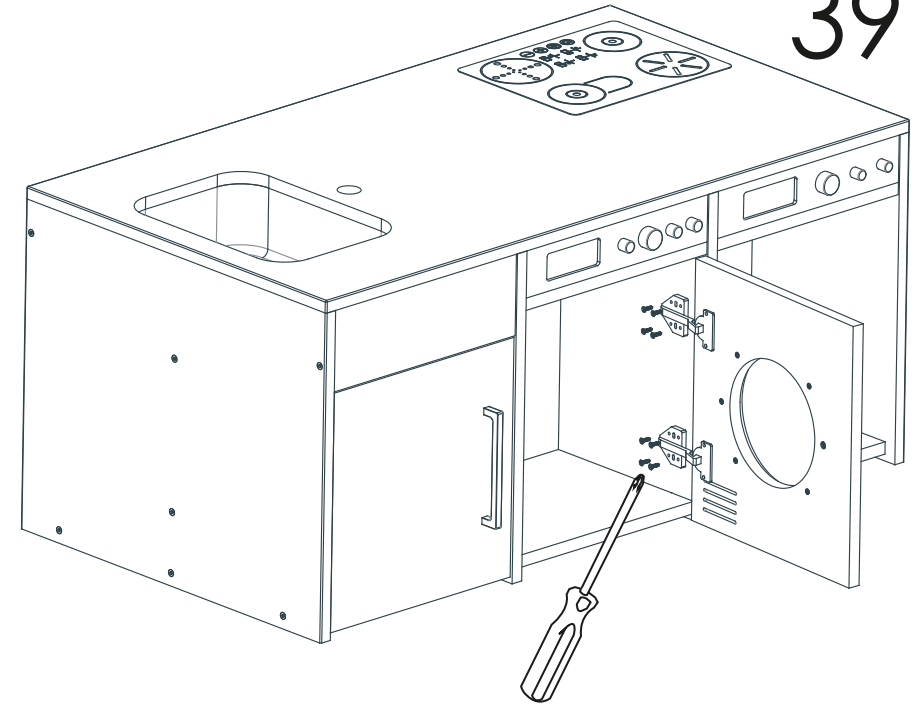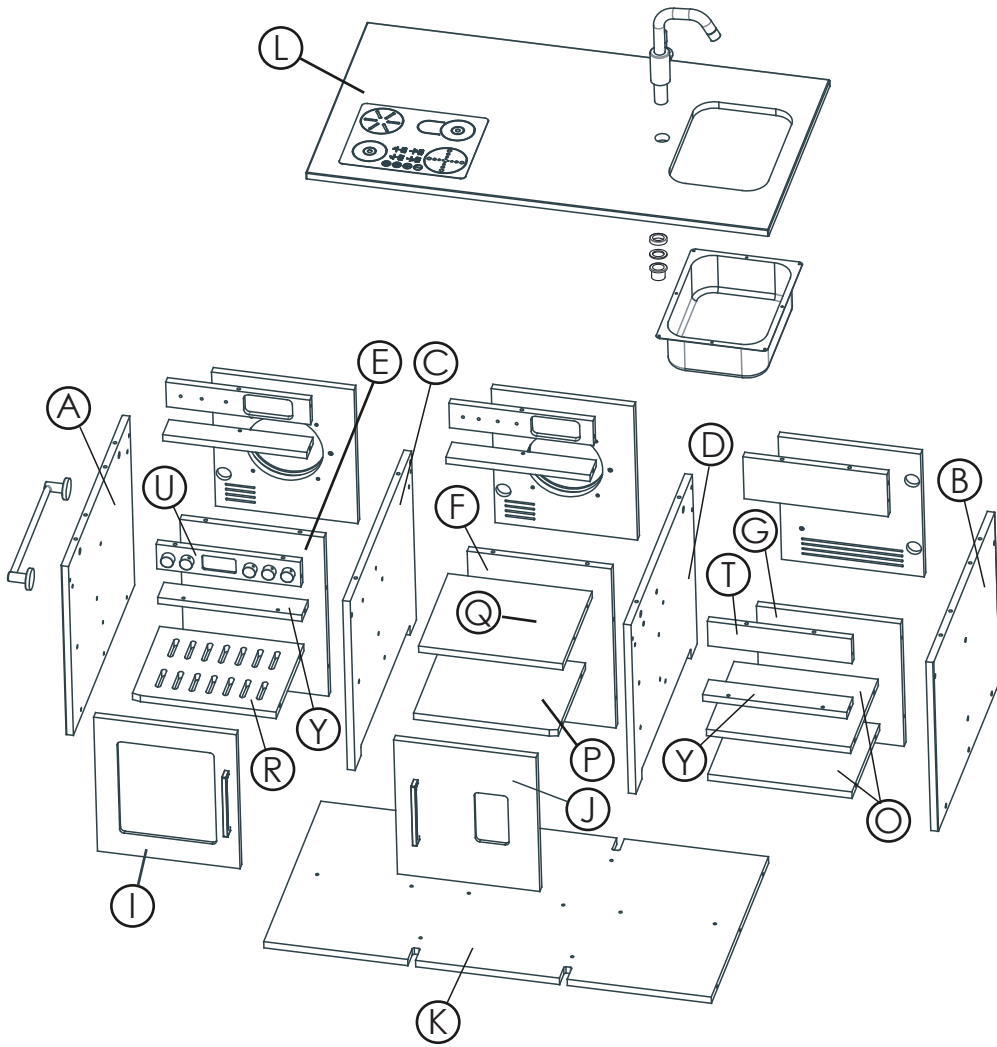

 40.




M

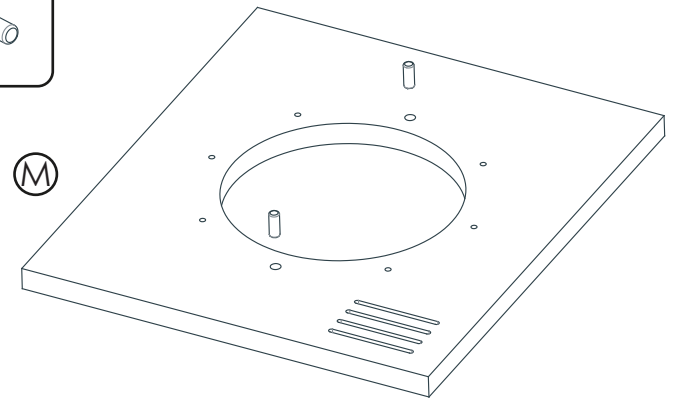 




BEFORE ASSEMBLING, MAKE SURE THERE ARE NO MISSING PARTS

DO NOT FULLY TIGHTEN SCREWS UNTIL ALL SCREWS HAVE BEEN LOOSELY POSITIONED

 
37.

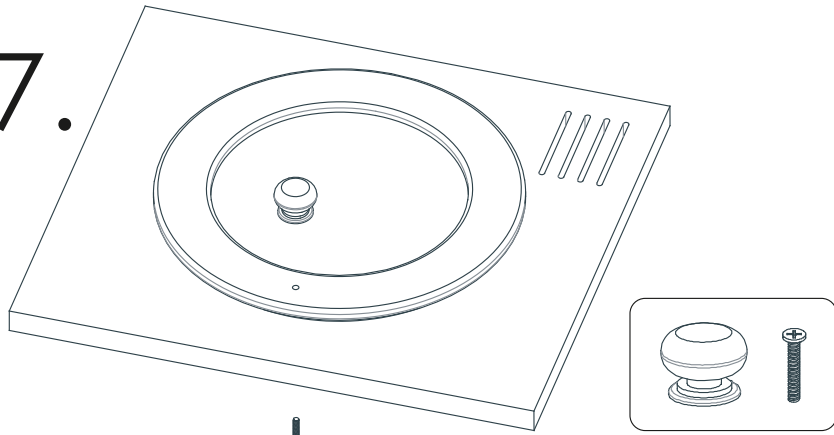

   38.


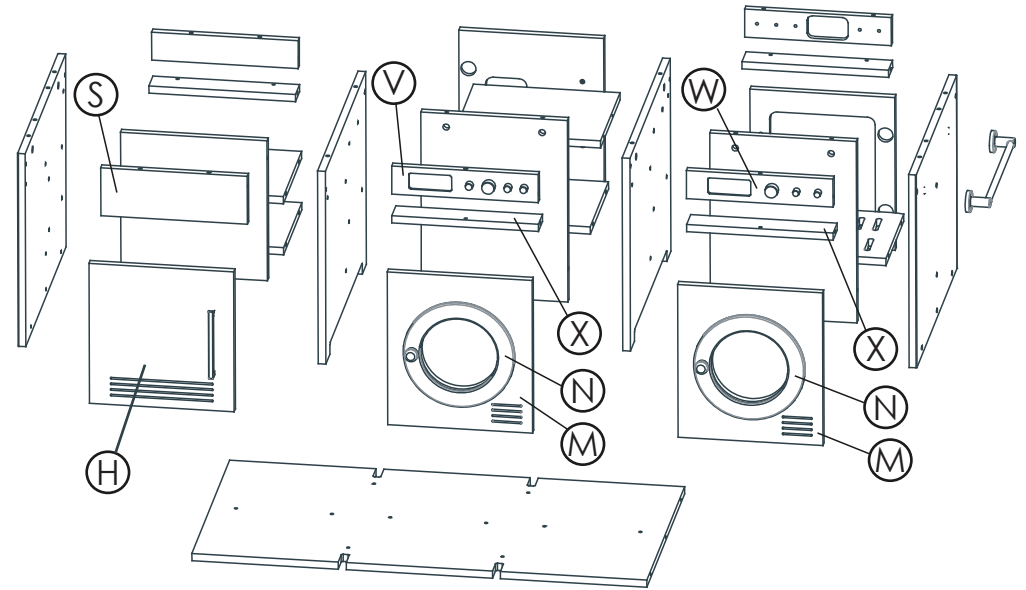
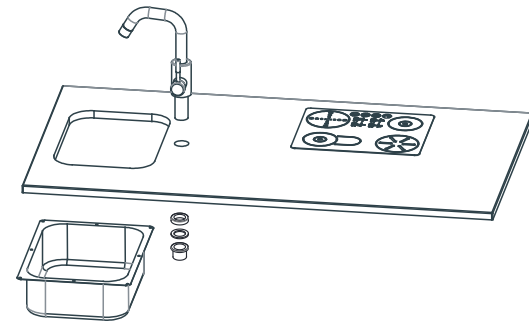
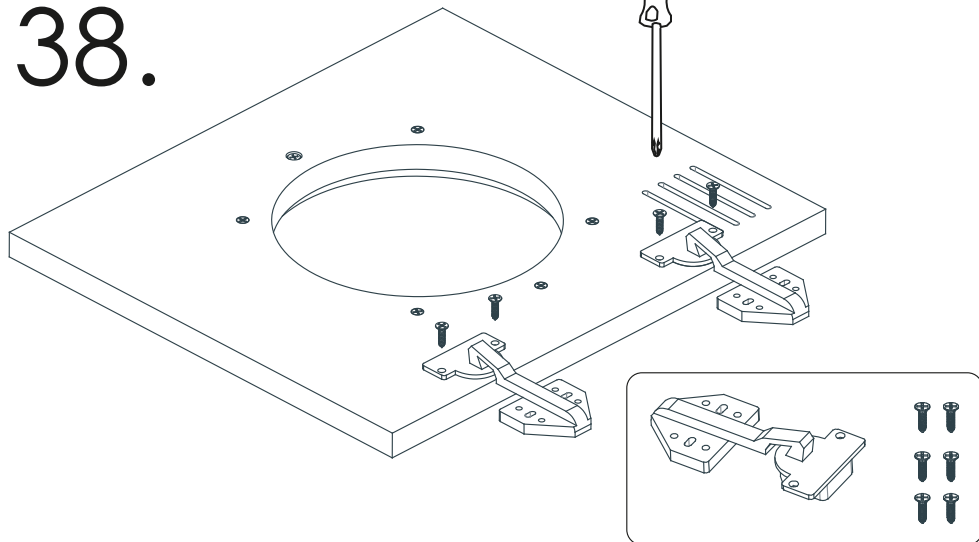


 ELECTRIC DRILLS MAY BE USED FOR ASSEMBLY. ENSURE APPROPRIATE SIZE DRILL BITS ARE USED, AND DRILL IS USED ON A SLOW AND LOW TORQUE SETTING


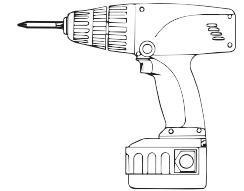


ASSEMBLY:

    
To avoid top scratching or damage, assembly should be done on top of a soft surface such as carpet, cardboard or a rug.

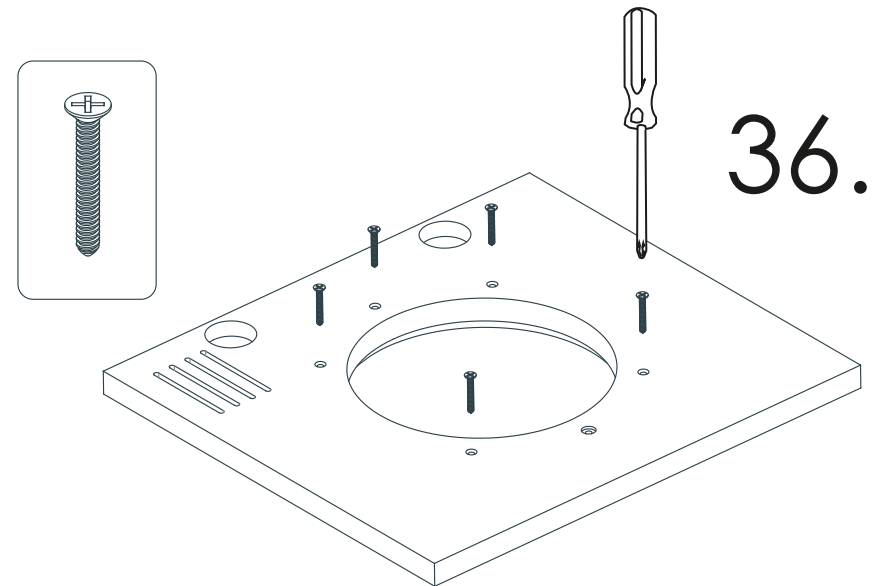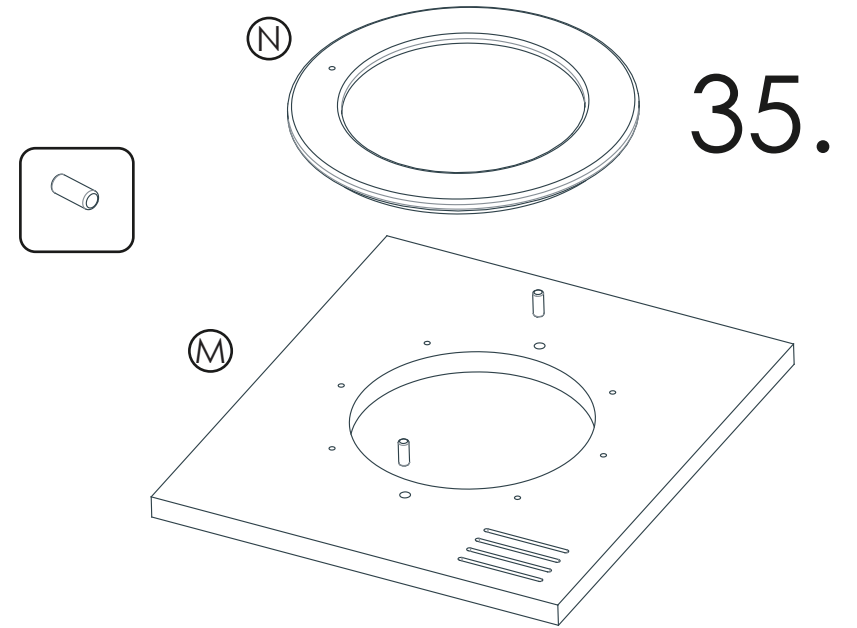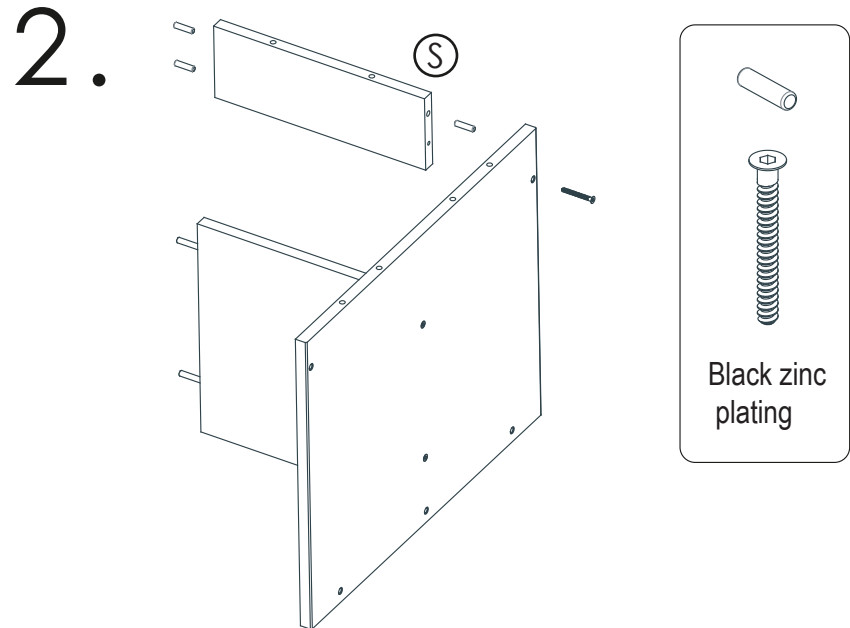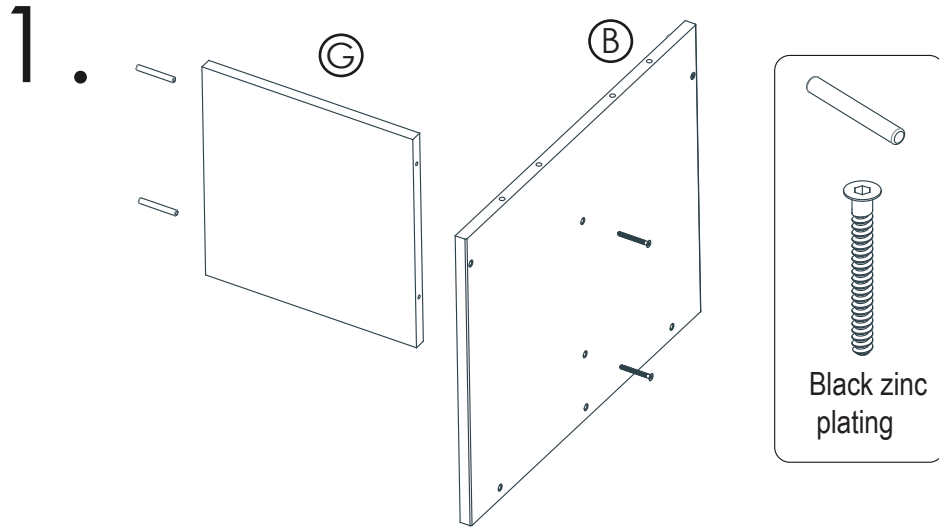

 
 
33.

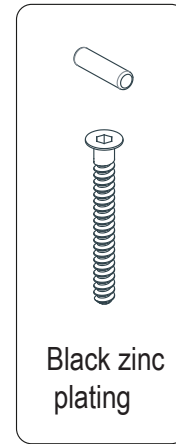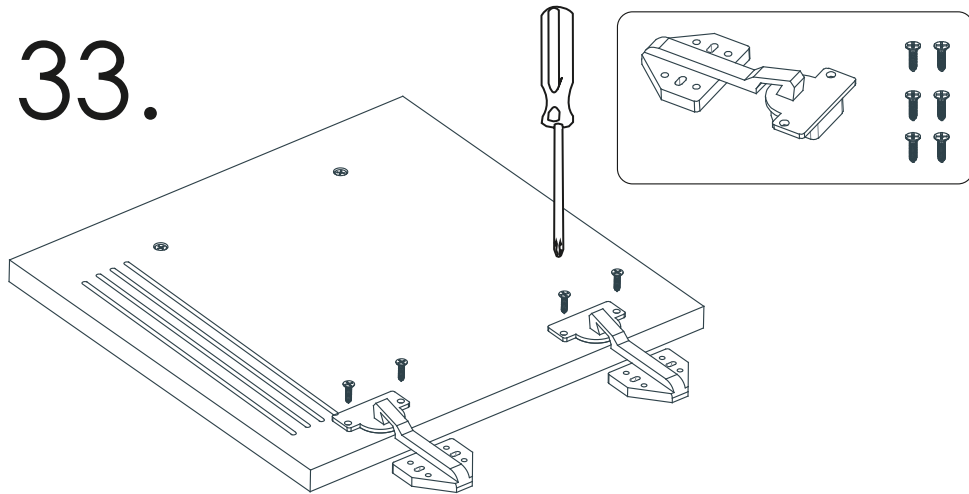

 
3.

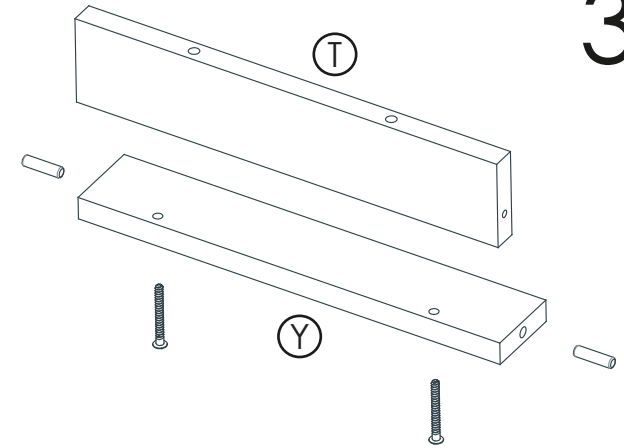

 
 
34.

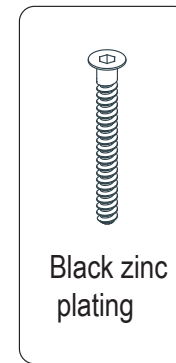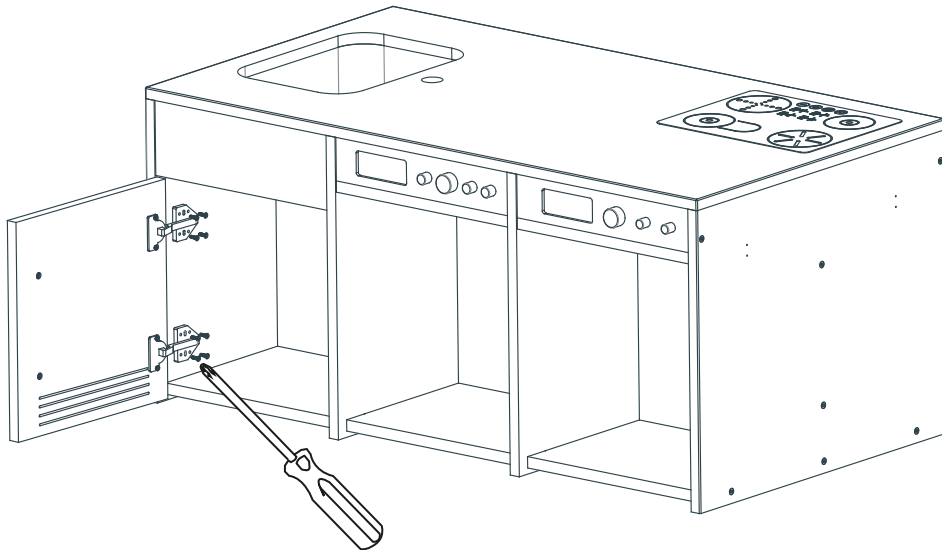

 
4.

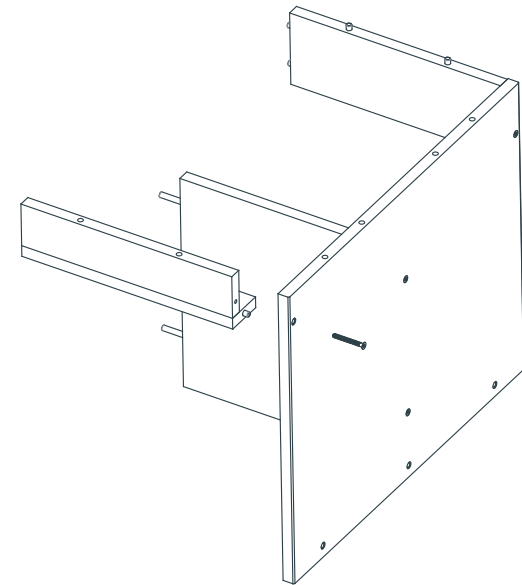

  
5.

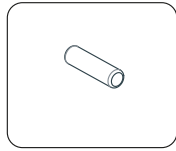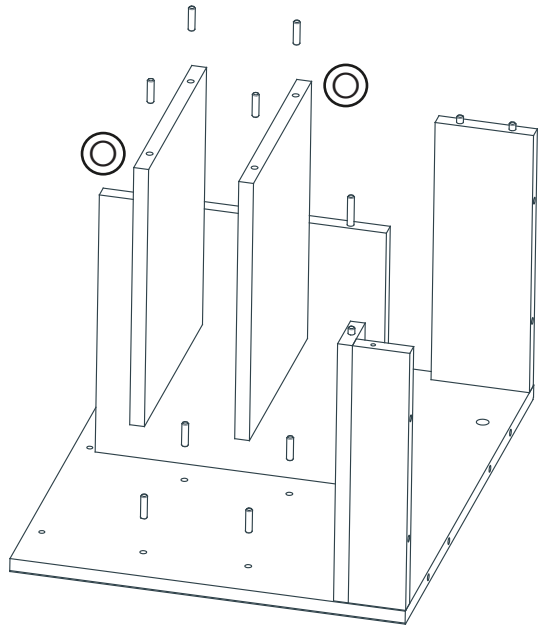

 
31.

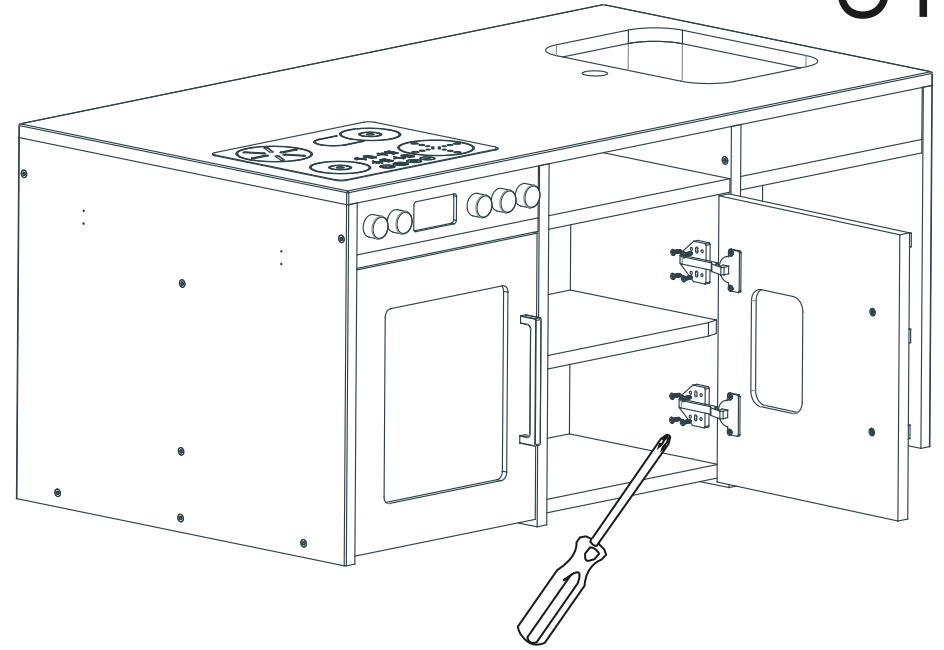


 
6.

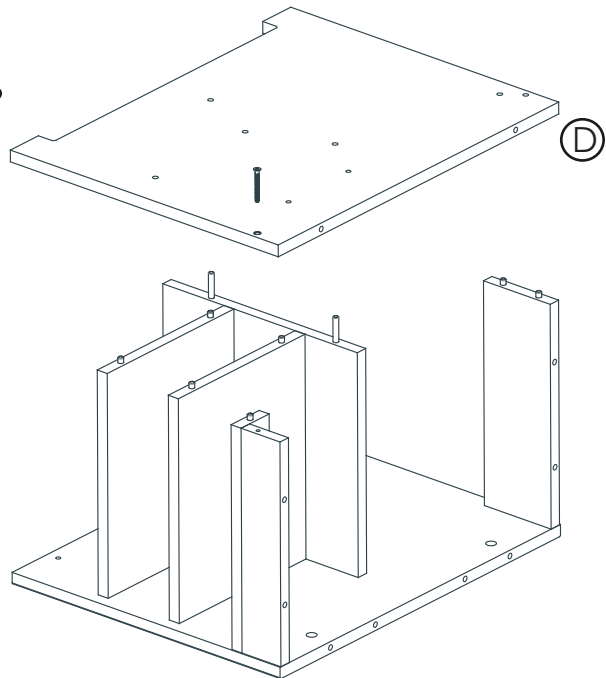

 
32.

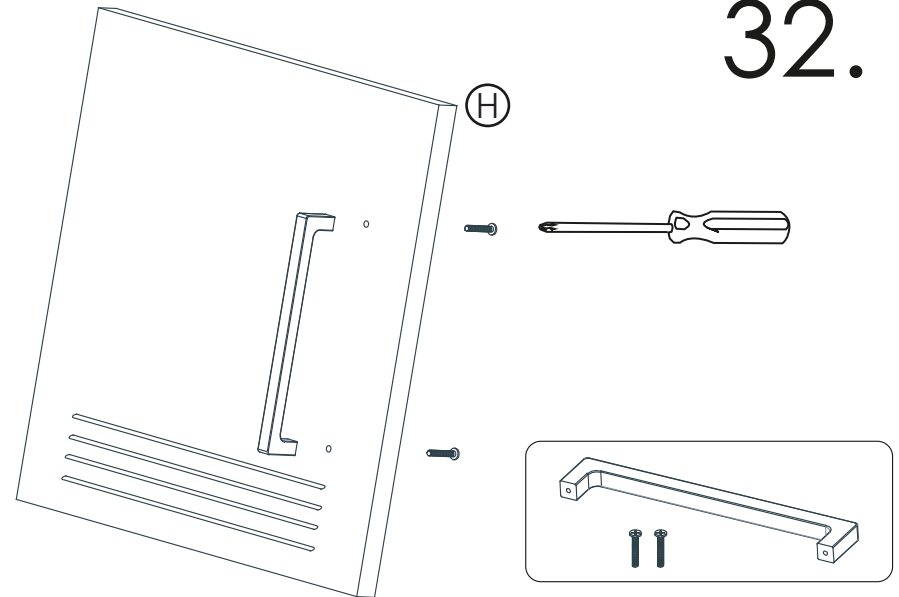

 
 
29.

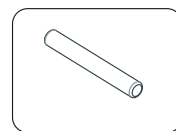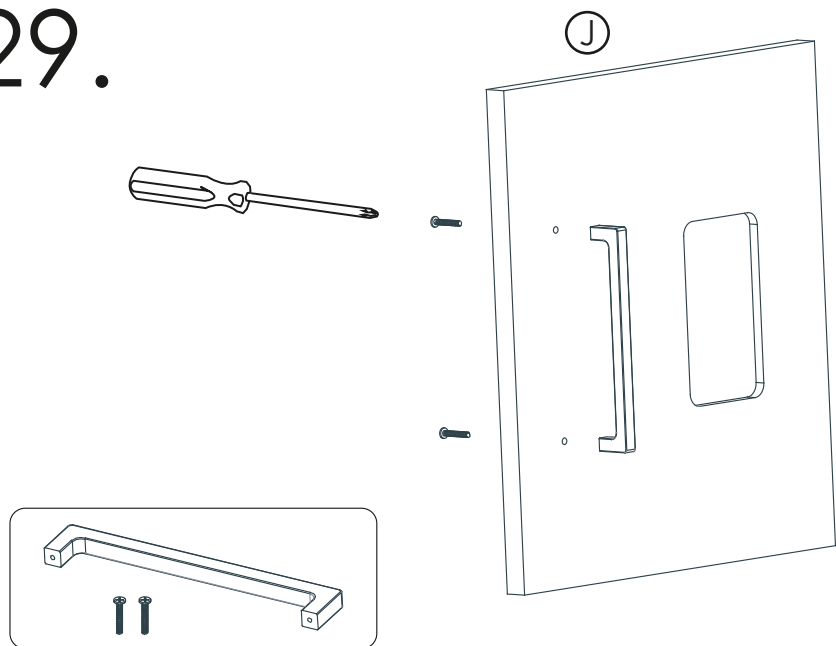

 
7.

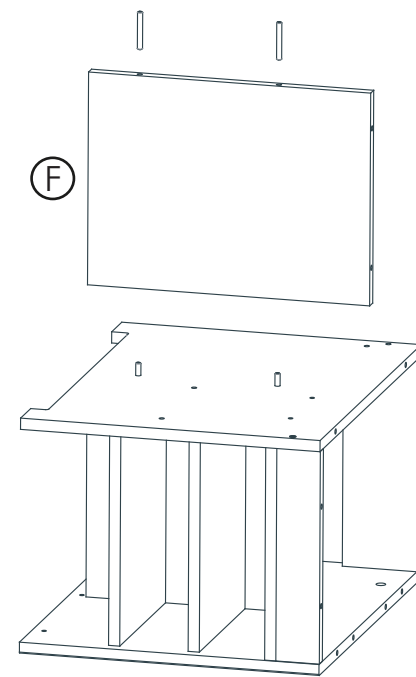

  
30.

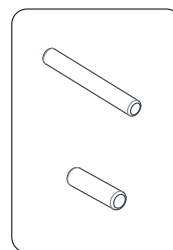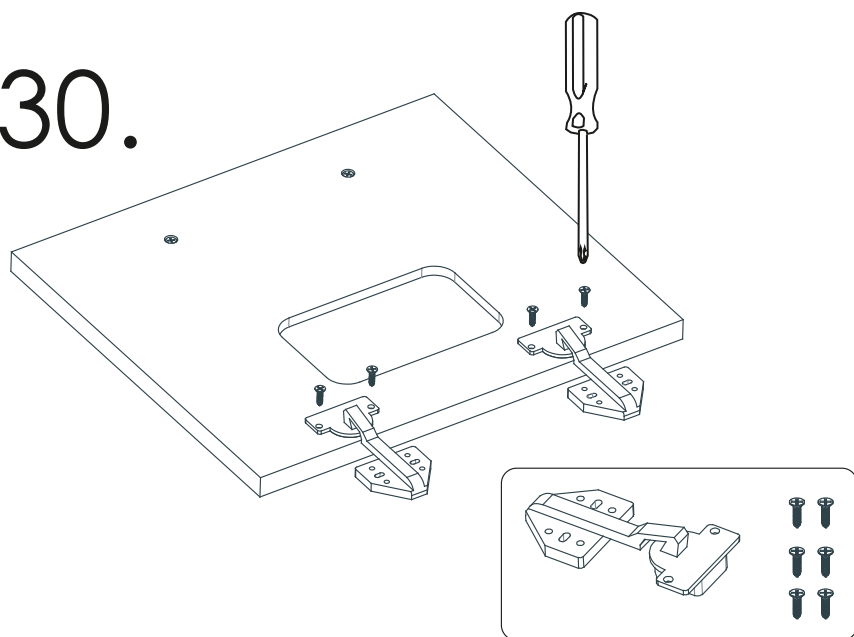

 
8.

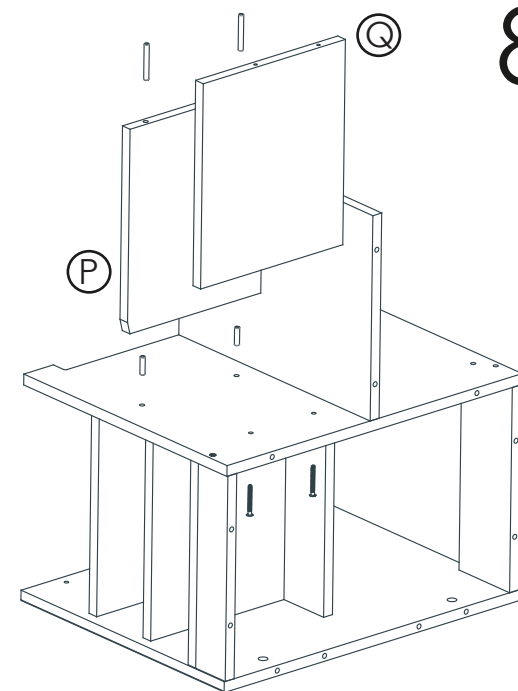

 
9.

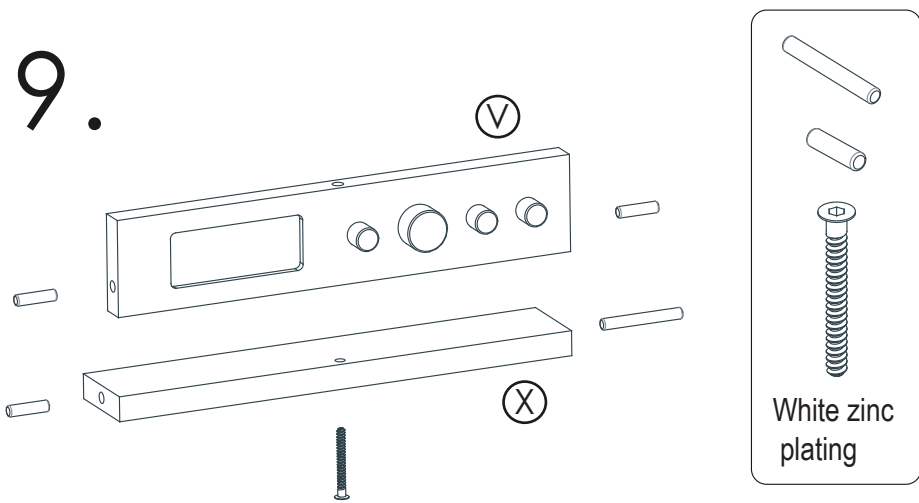

 
10.

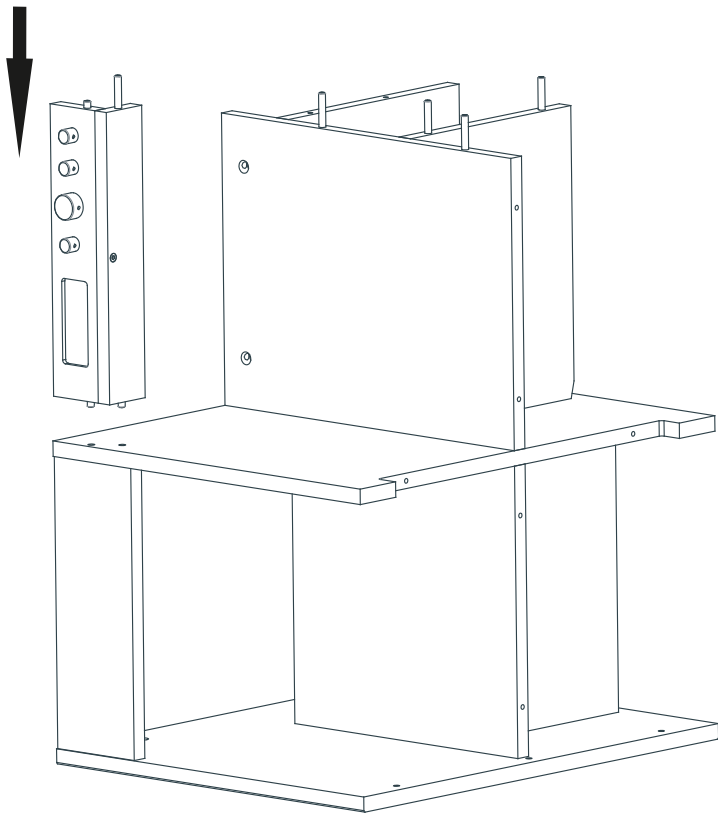


 
27.

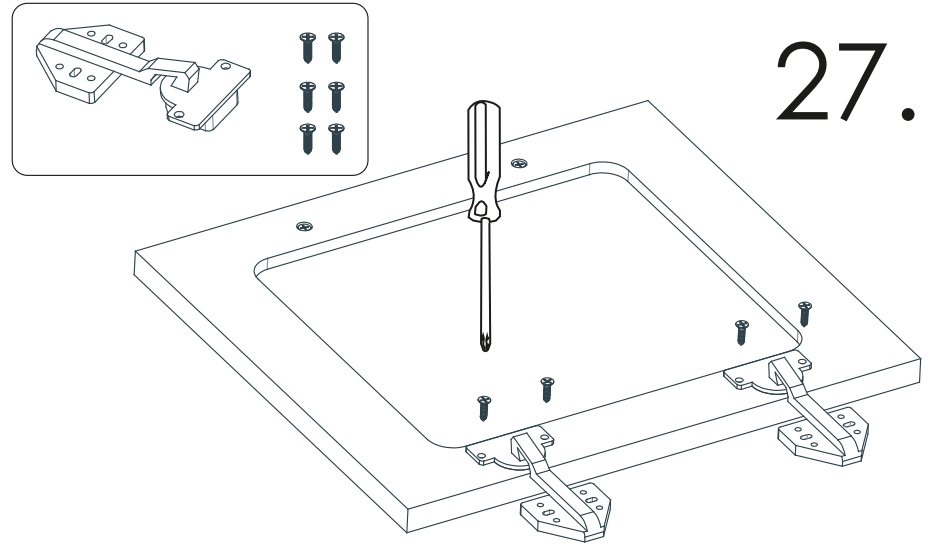

 
28.

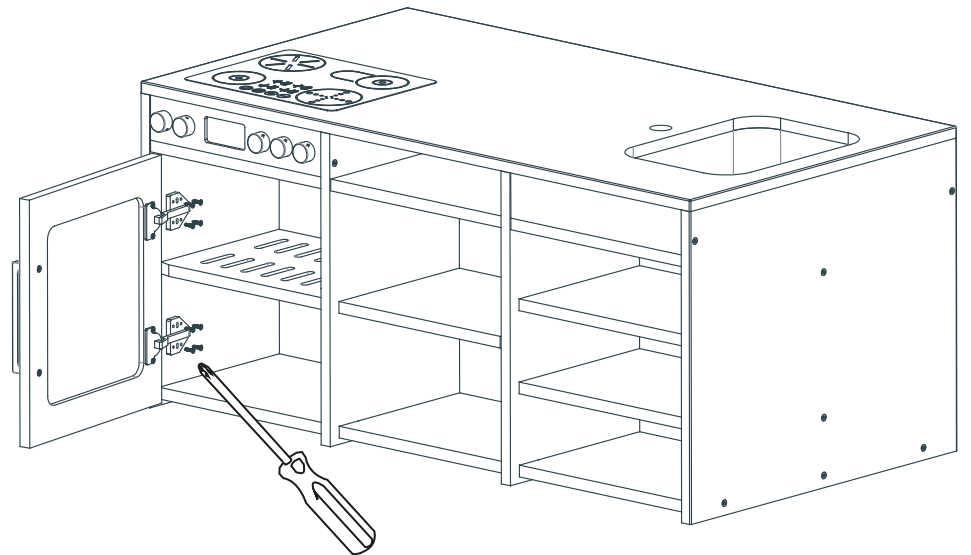

 
 
25.

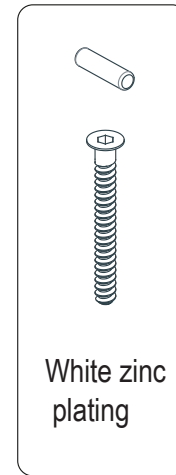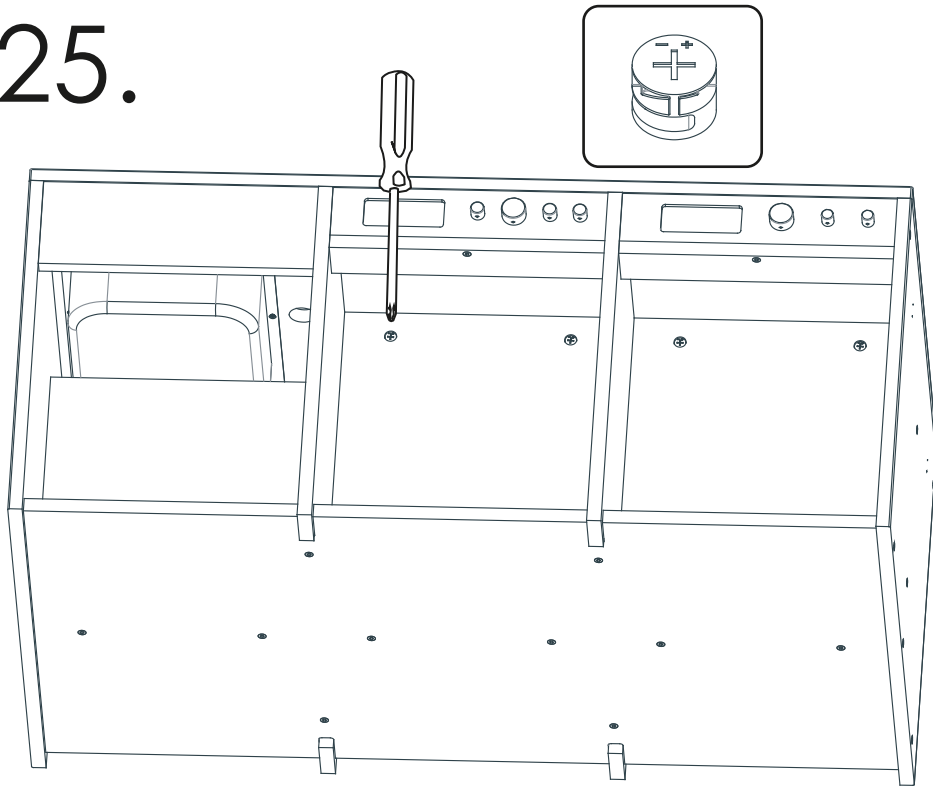

 
11.

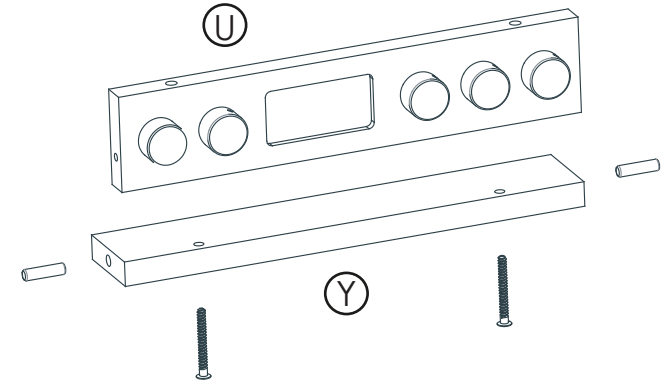

 
 
26.

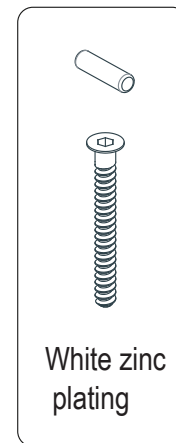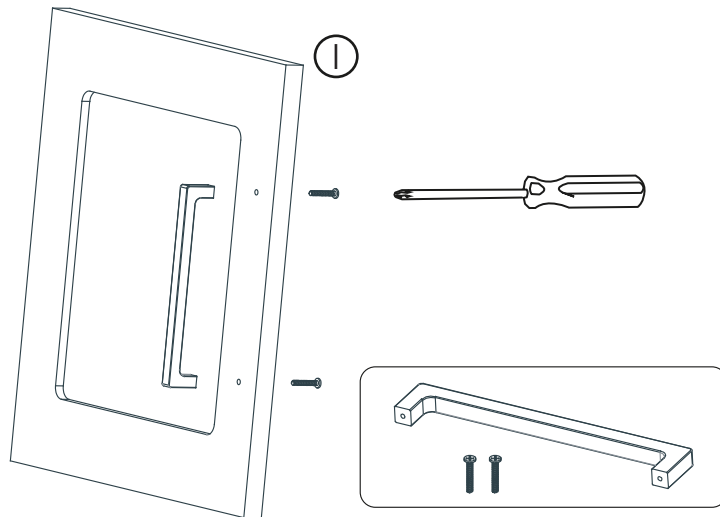



 
12.

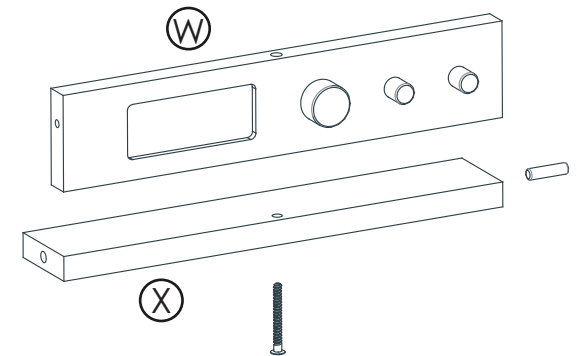

 
 
13.

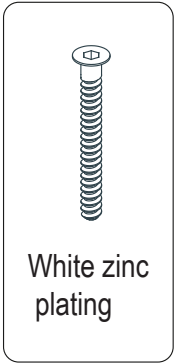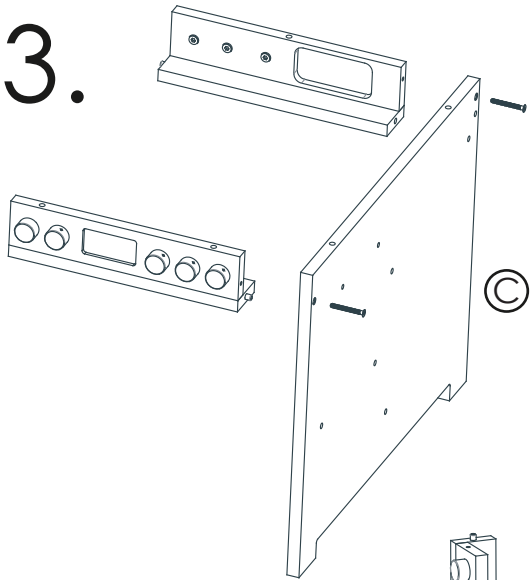

  
 
14.

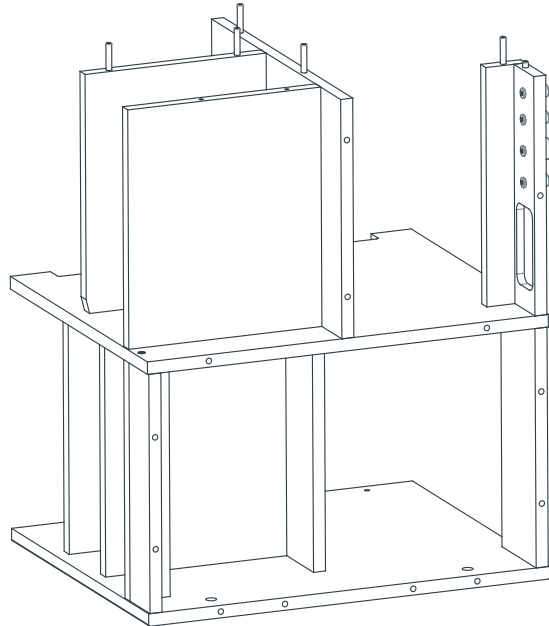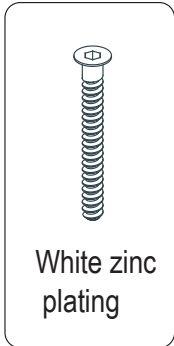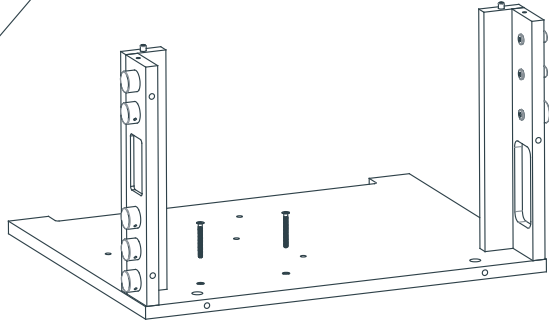


 
 
23.

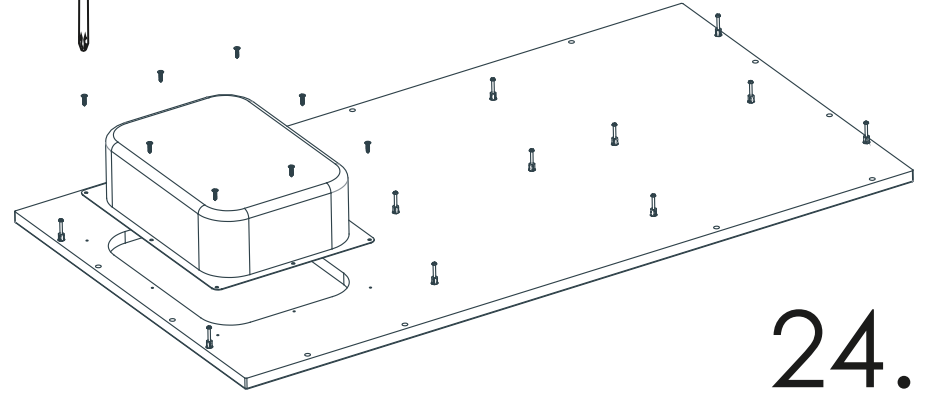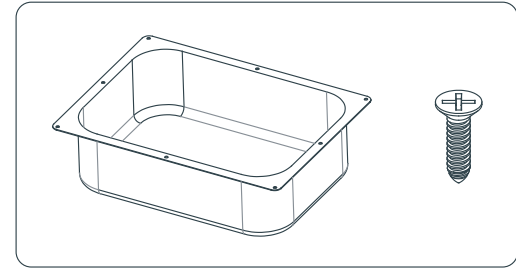

 
 
24.

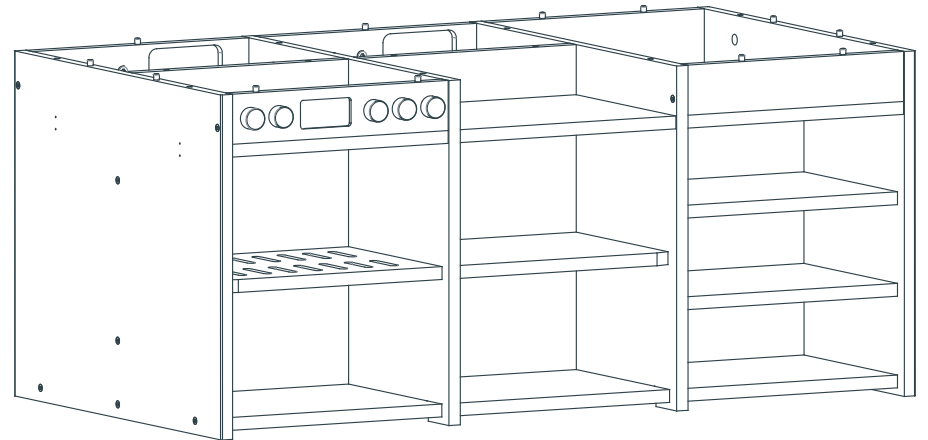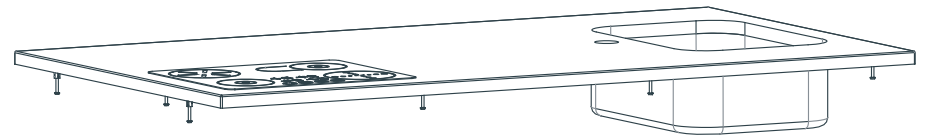

   21.

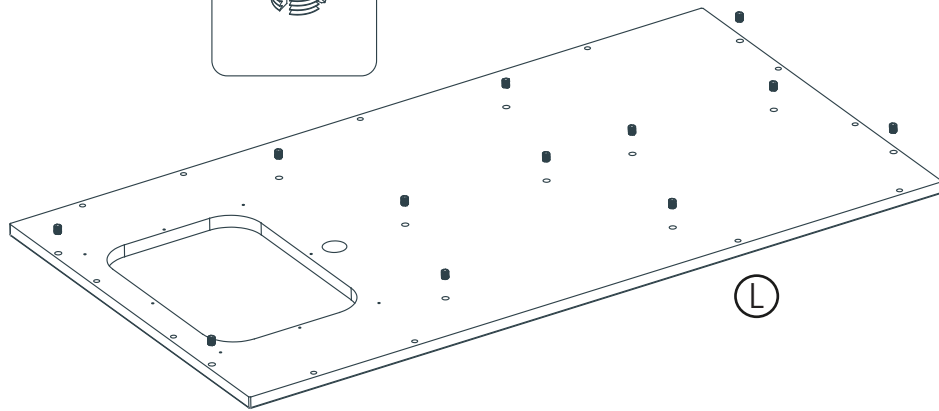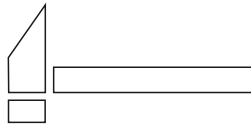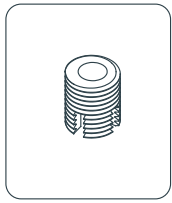


  22.

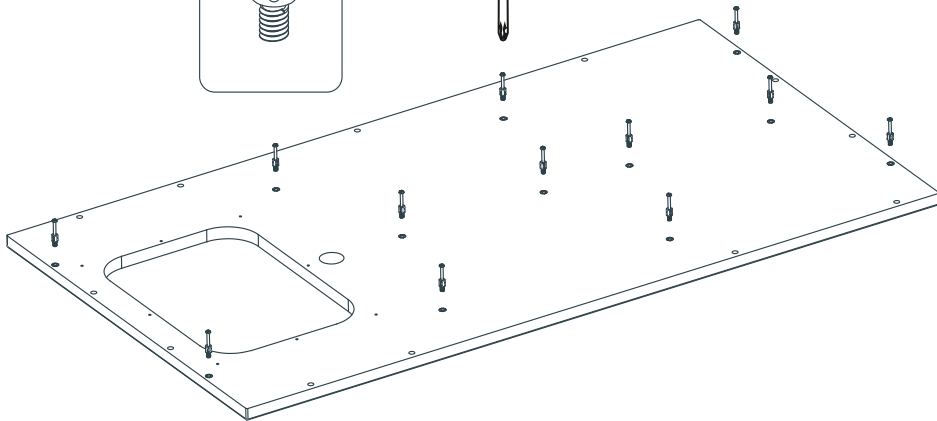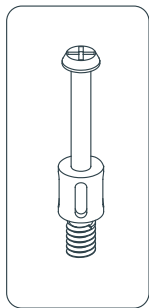



Ⓔ

 15.


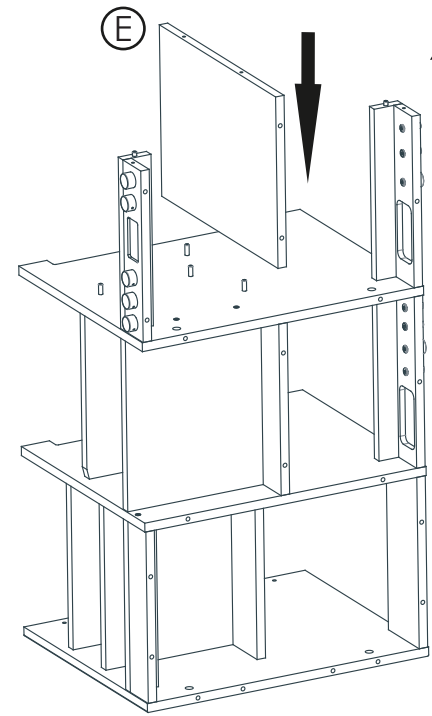


16.

  
Ⓓ

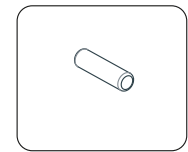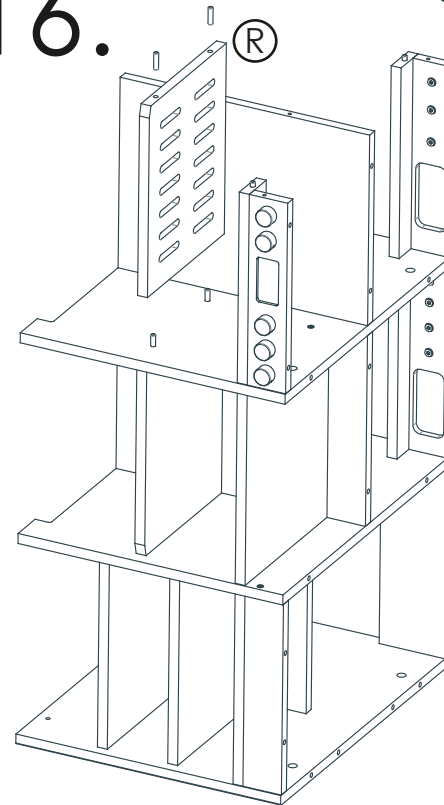

 
 
17.

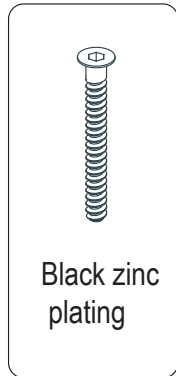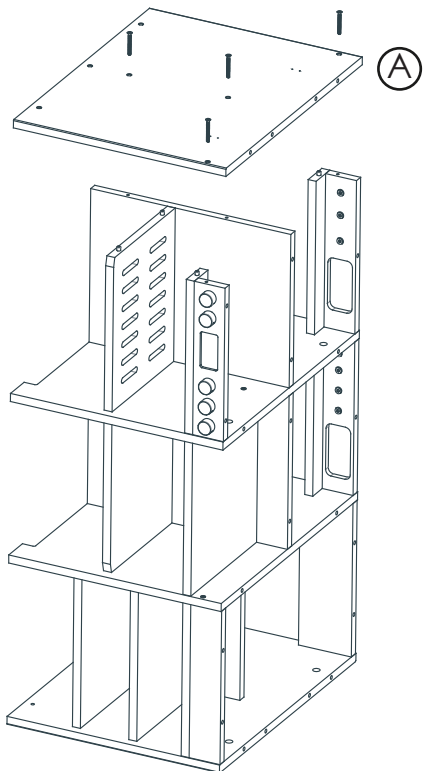

 19.

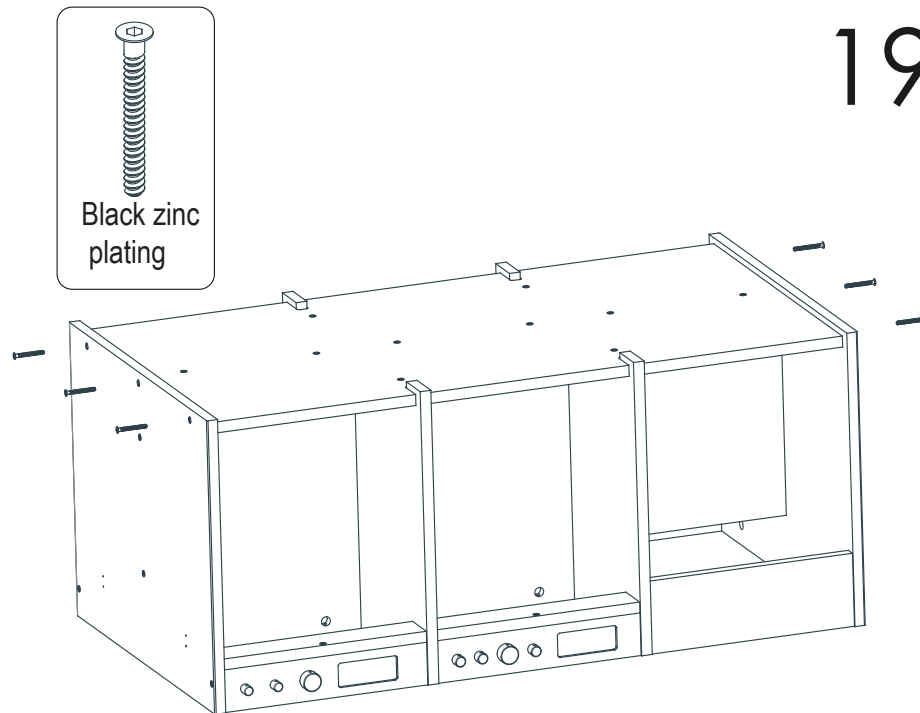

  18.

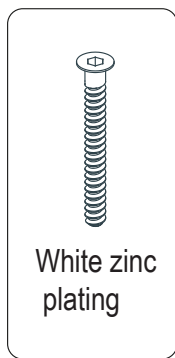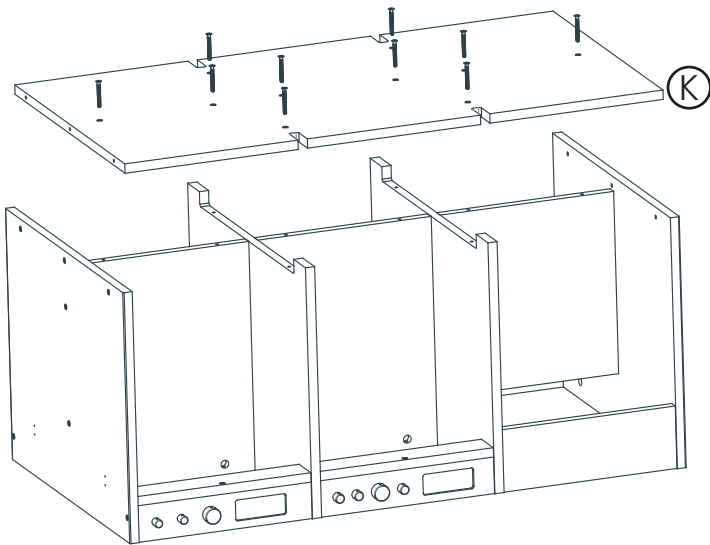

20.

